



Samsung Galaxy S4 Active MicroSD Card Replacement

Replace the microSD card.

Written By: Geoff Wacker



INTRODUCTION

Use this guide to replace the microSD card in a Samsung Galaxy S4 Active.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Rear Case



- Pry with a plastic opening tool, or your fingernail, in the divot to the left of the rear-facing camera, near the power button.
- Lift the rear case by the corner nearest the divot and remove it from the phone.

Step 2 — MicroSD Card



- Use the flat end of a plastic opening tool, or your fingernail, to press the microSD card slightly deeper into its slot until you hear a click.
- After the click, release the card and it will pop out of its slot.
- Remove the microSD card.

- ☒ For reassembly, push the microSD card into the slot until it clicks in place.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 11:57:43 PM.